

SYNPLICITY QUICK START GUIDE

USE VOICE STATION TEMPLATE TO ALIGN MIC HOLE IN COP

FOR SYNPLICITY 4GX – wire 230VAC INTO POWER SUPPLY (BLACK TERMINAL BLOCK) ENSURE EARTH CONNECTION

QUICK ONE NUMBER CONFIG:

START CONFIG MODE: * 0 # SYSTEM RESPONDS “PROGRAM MODE ENABLED”.

PHONE NUMBER 1: **210112 (EMERGENCY NUMBER) #** SYSTEM RESPONDS “CORRECT”

EXIT PROGRAM MODE: * 0 # SYSTEM RESPONDS “PROGRAM MODE DEACTIVATED”

FURTHER CONFIG (if required): UP TO 12 NUMBERS CAN BE STORED:

PHONE NUMBER 2: **210212 (EMERGENCY NUMBER) #** SYSTEM RESPONDS “CORRECT”

PHONE NUMBER 3: **210312 (EMERGENCY NUMBER) #** SYSTEM RESPONDS “CORRECT”

PHONE NUMBER 4: **210412 (EMERGENCY NUMBER) #** SYSTEM RESPONDS “CORRECT”

YOU CAN EXIT CONFIG MODE AT ANY TIME IF NO FURTHER PROGRAMMING IS **NEEDED**

* 0 # SYSTEM RESPONDS “PROGRAM MODE DISABLED”

ALARM BUTTON DELAY:

42 2 (2 = 2 SECONDS) SYSTEM RESPONDS “CORRECT” DEFAULT IS 2 SECS

SPEAKER UNIT VOLUME SETTING DEFAULT 80 01 3 5

80 (80=SETTING) **01** (01=VOICE STATION 1) **3** (3=SPEAKER VOLUME) **5** (5=MIC VOLUME)

CHANGE ALARM BUTTON TO NORMALLY CLOSED – 40 01 0 1(40=STATION INPUT)(01=STATION 1) (0=BUTTON N.C)(1=AUX-N.O)

TEST PHONE CALL:

0 THEN NUMBER (MUST BE IN CONFIG MODE)

RECORD VOICE MESSAGE LOCATION AND LIFT NUMBER:

71 01 “SPEAK” HANG UP – RECORDS MESSAGE

72 01 PLAYS BACK MESSAGE

LED DIAGNOSTICS GUIDE



